
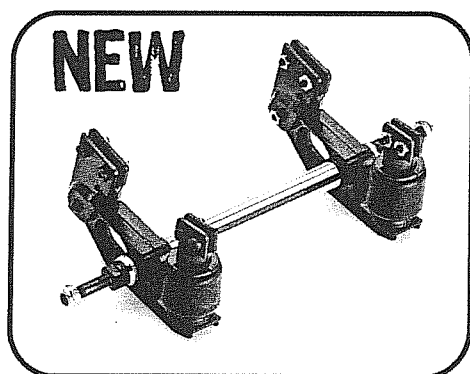



KOFFER-AUFLIEGER II SEMI-TRAILER II

- (GB) Instruction manual
- (D) Bauanleitung
- (F) Mode d'emploi
- (E) Instrucciones
- (I) Istruzioni d'uso

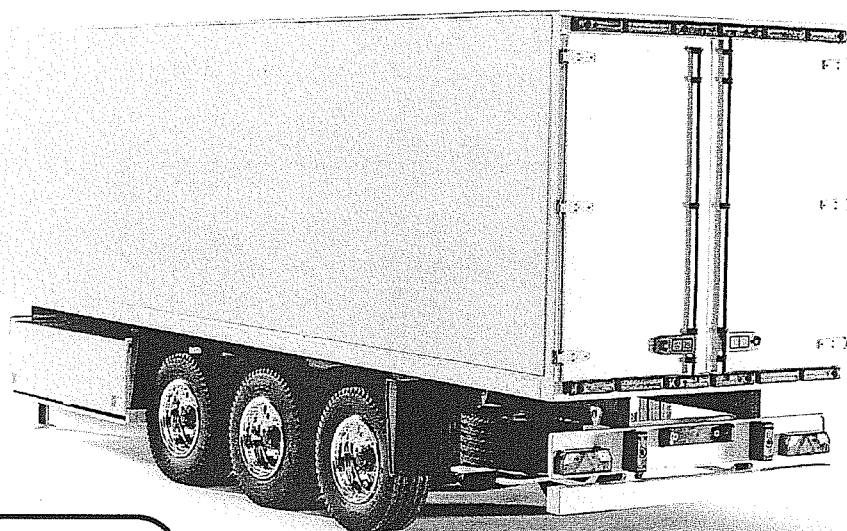

CARSON Koffer-Auflieger II
Art.nr.: 50 090 7092

A

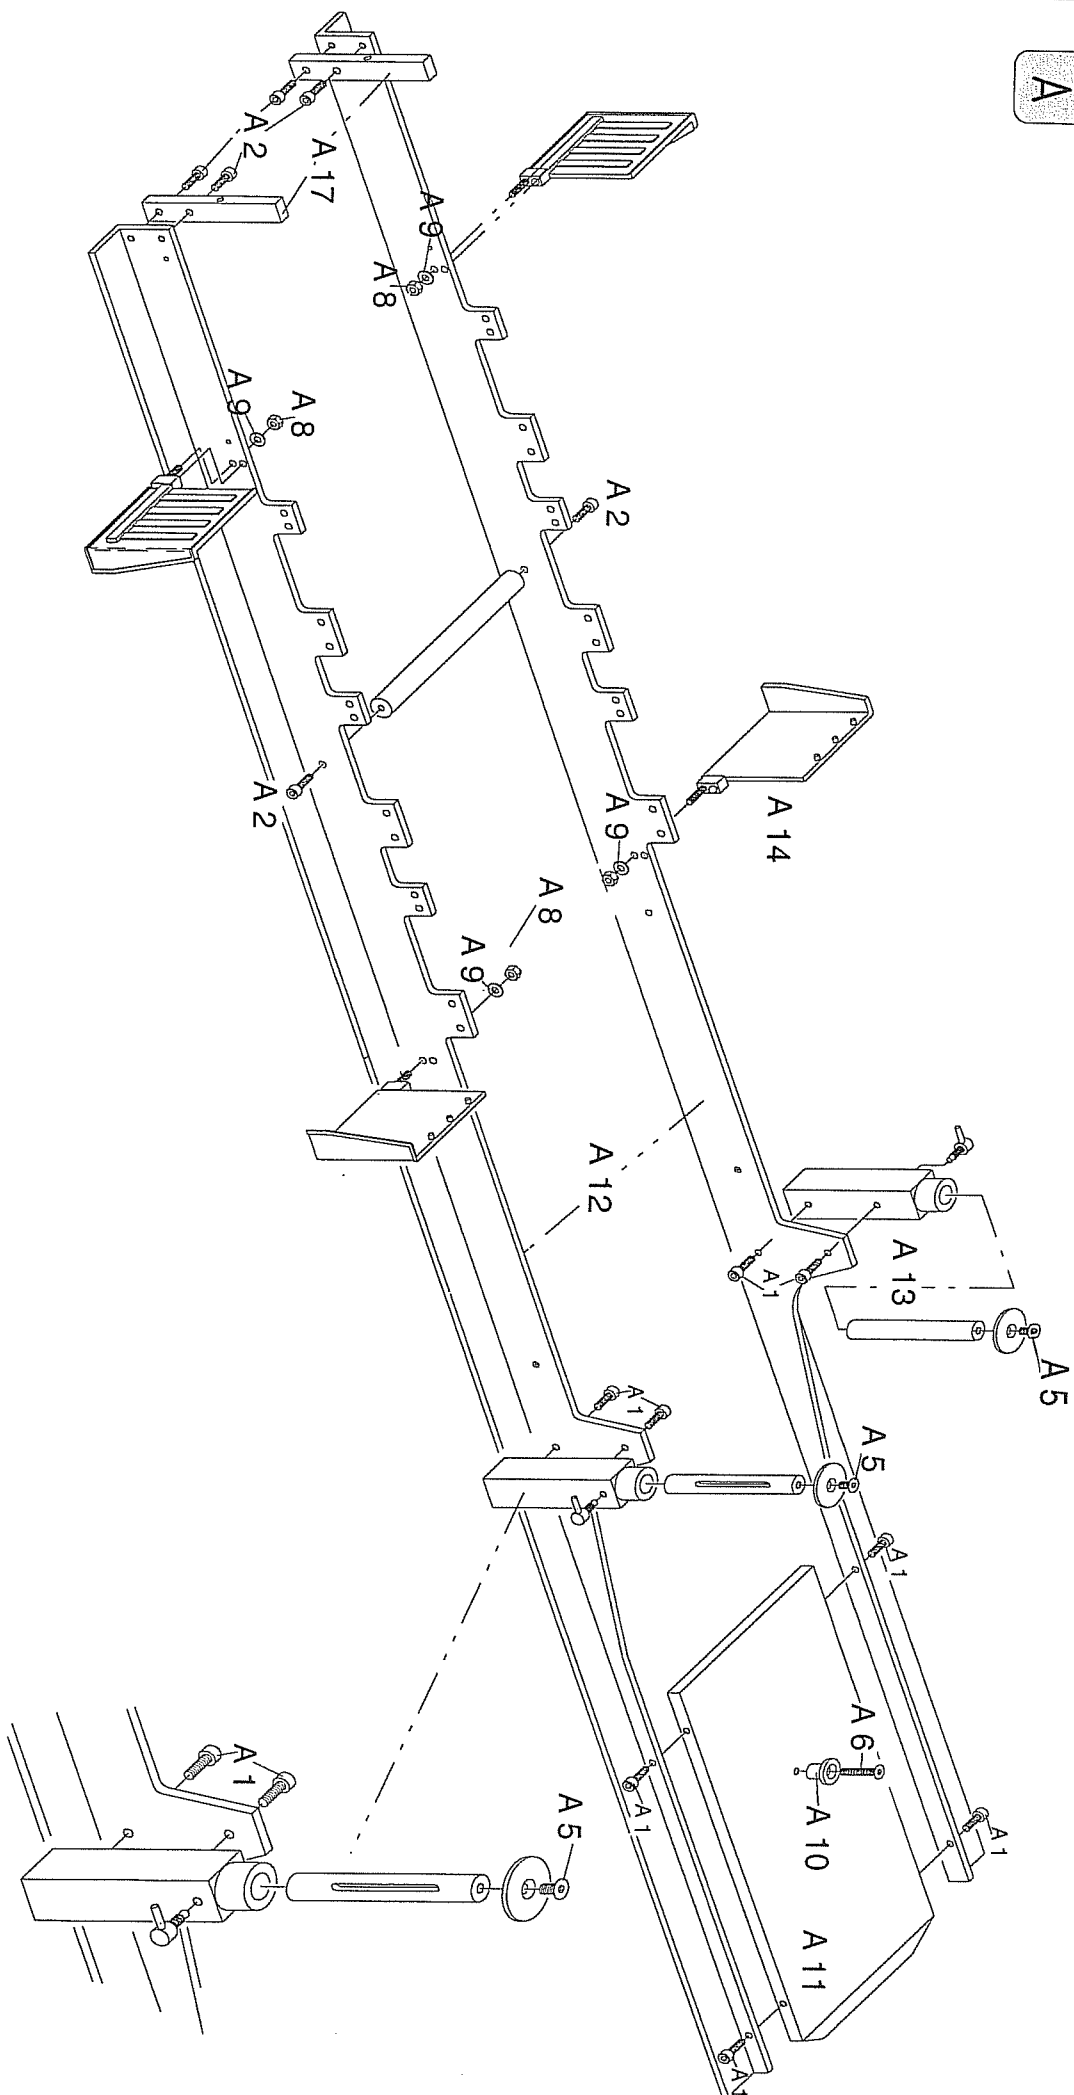

- M3 x 8 A5 2x
- M3 x 8 A6 1x
- 3,2 x 6,5 A9 4x
- M3 x 8 A2 6x
- M3 x 8 A1 8x
- M3 x 6 A1 1x
- M3 x 8 A10 1x



M2 x 6

B1
4x



M3 x 14

B5
2x




M2 x 6

B2
2x




2.2 x 6.5



B3
4x






M2

B8
2x


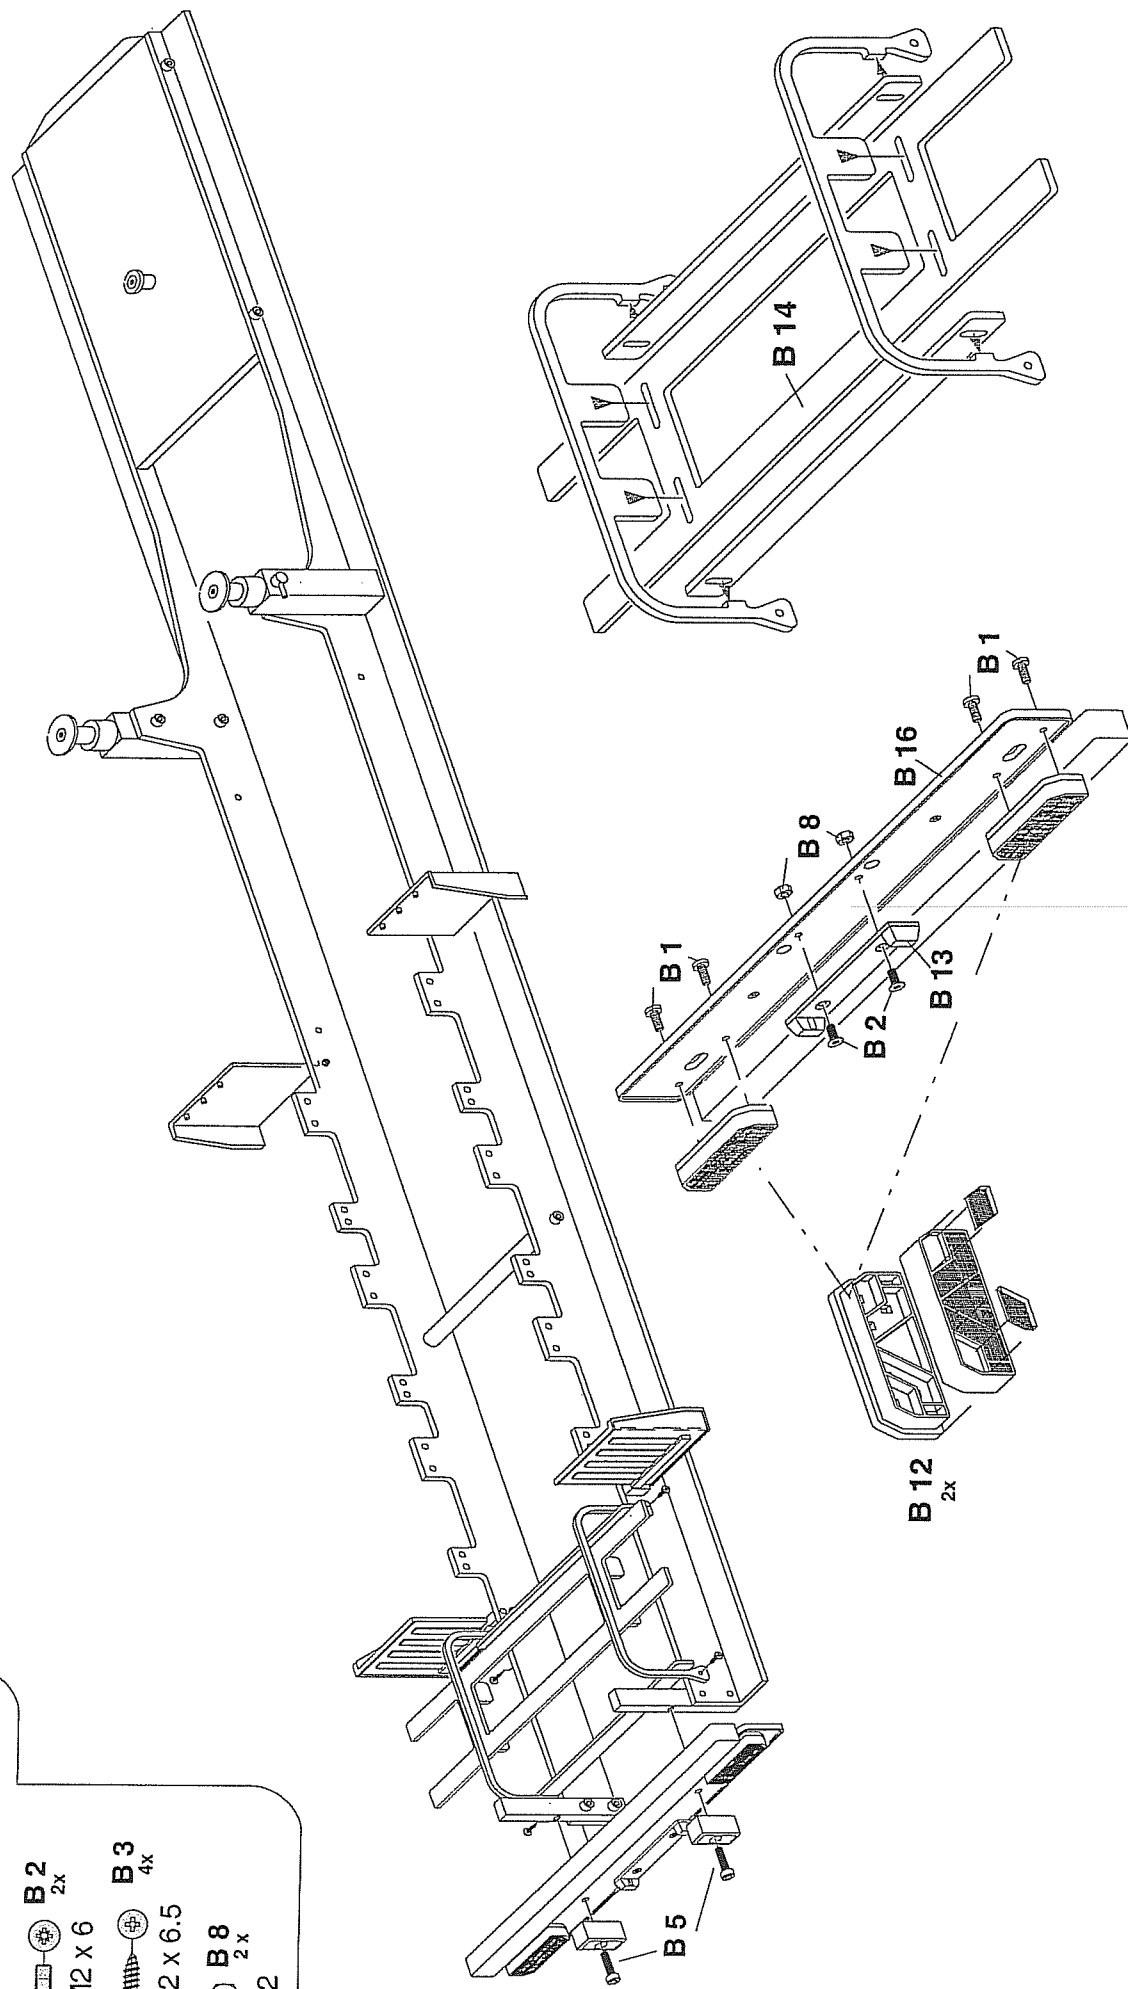


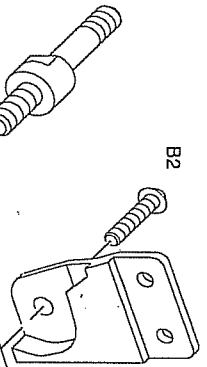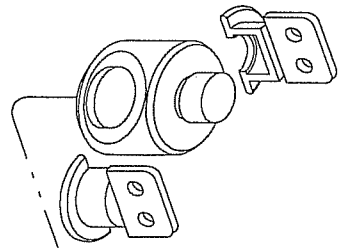

ABS-KLEBER

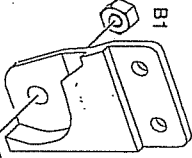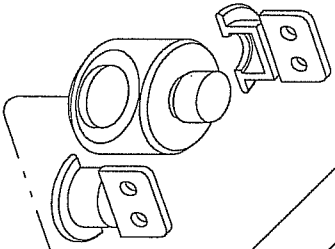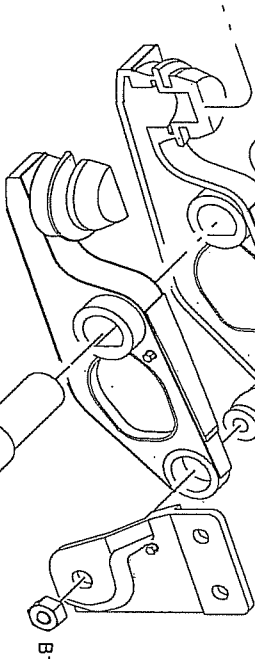

ABS-KLEBER

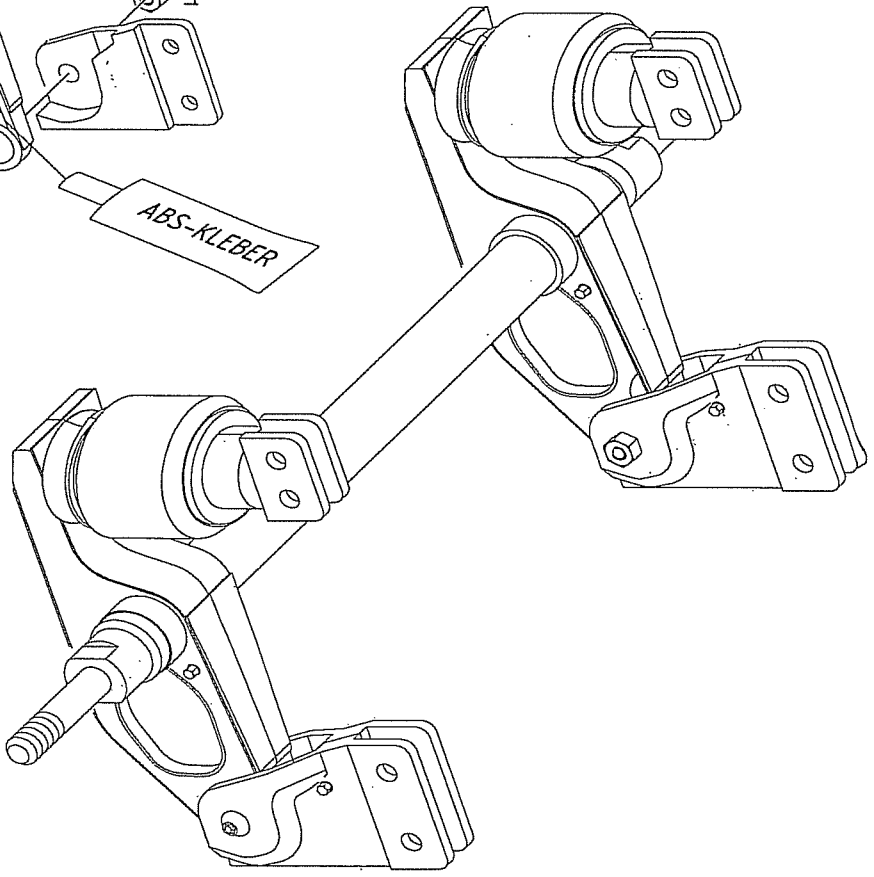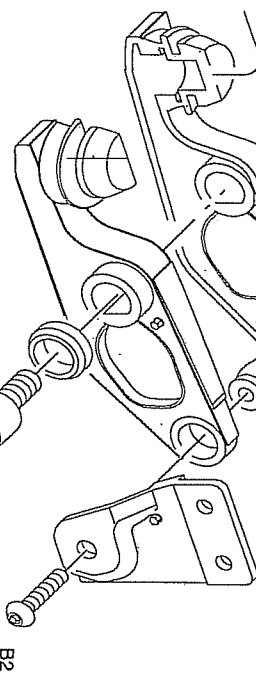

M3x14

B2 6x




M3



B1 6x

D

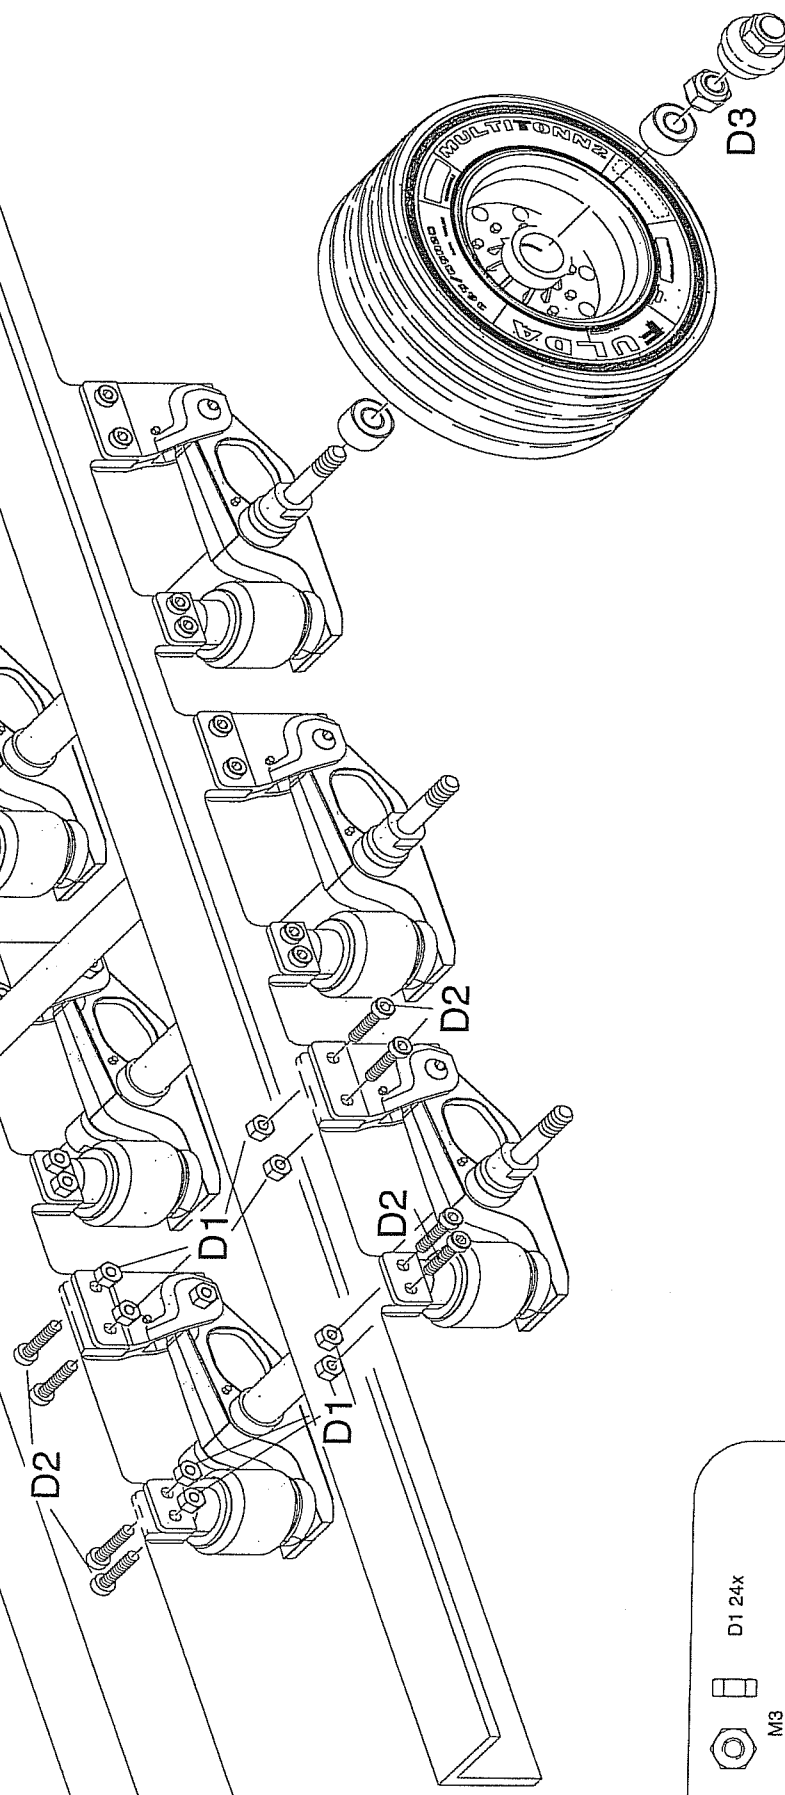









 D1 24x

M3

 D2 24x
M3 x 10

 D3 6 x
Stopmutter M5

E

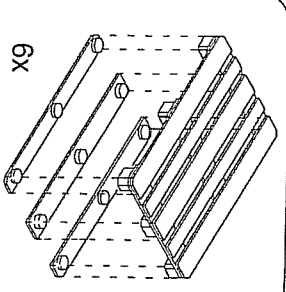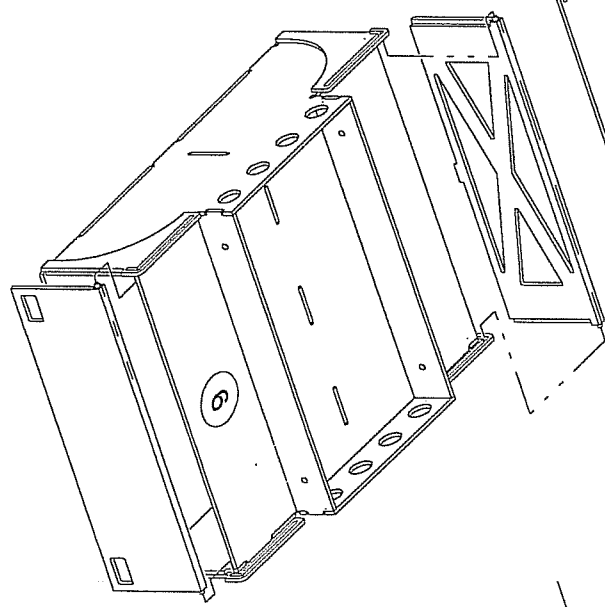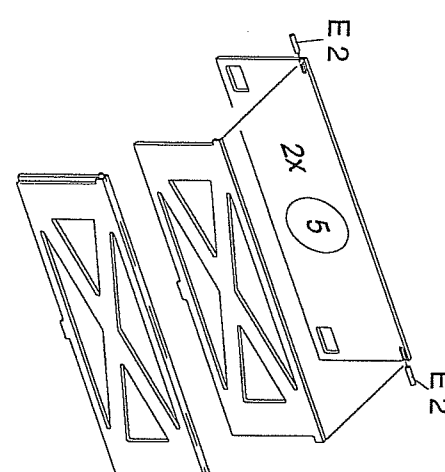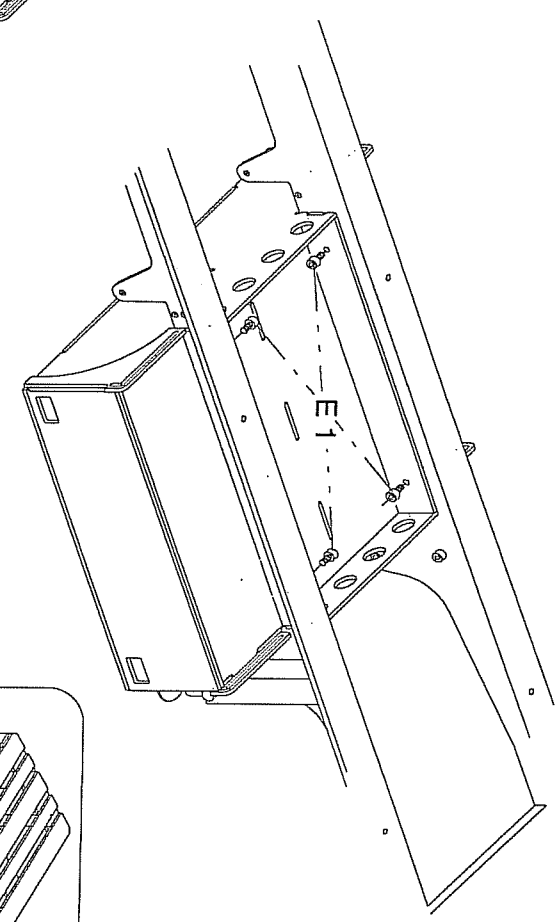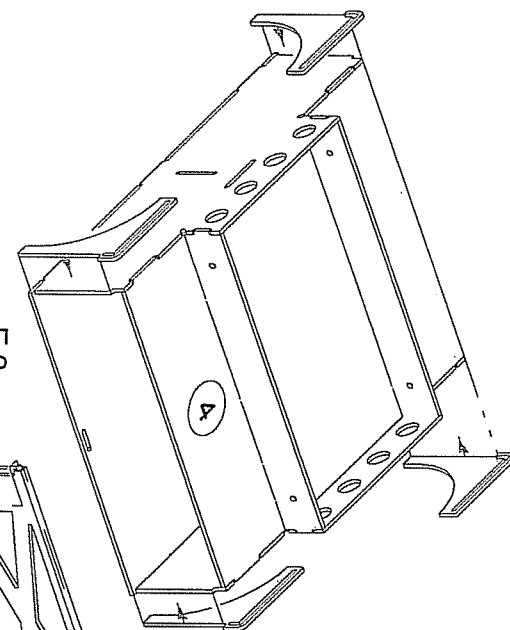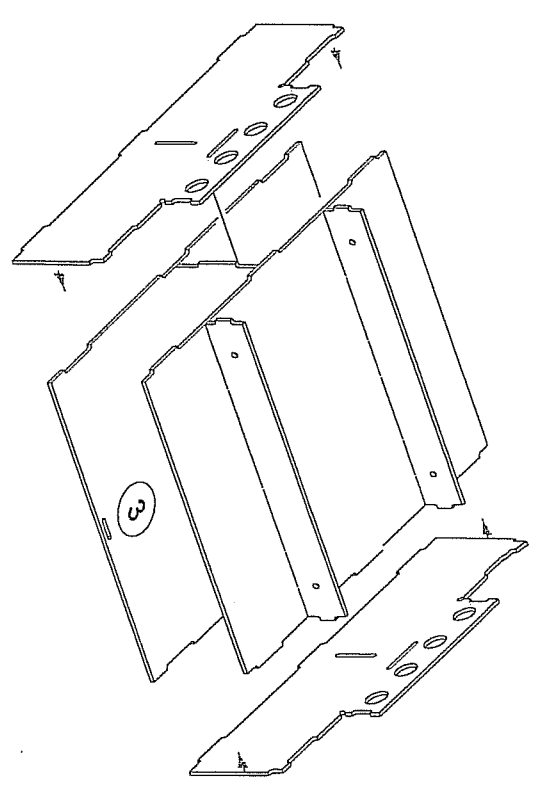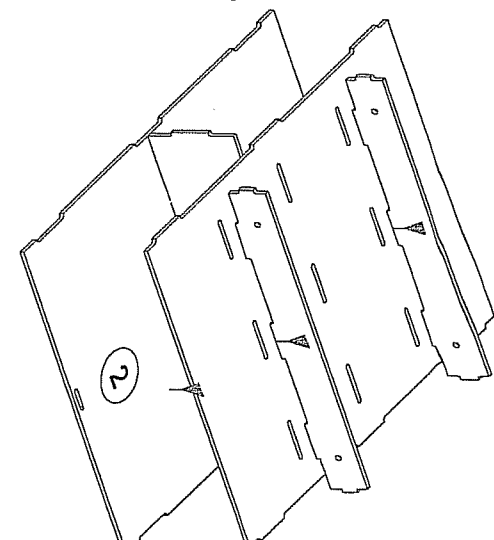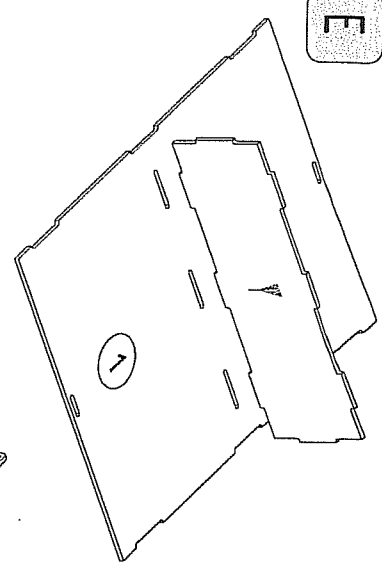

M3 x 6
E 1
E 2 4x




POWERED BY VEROMA





F

F1
21x
M3 x 6

F2
2x
M3 x 10

F3
4x
M3 x 6

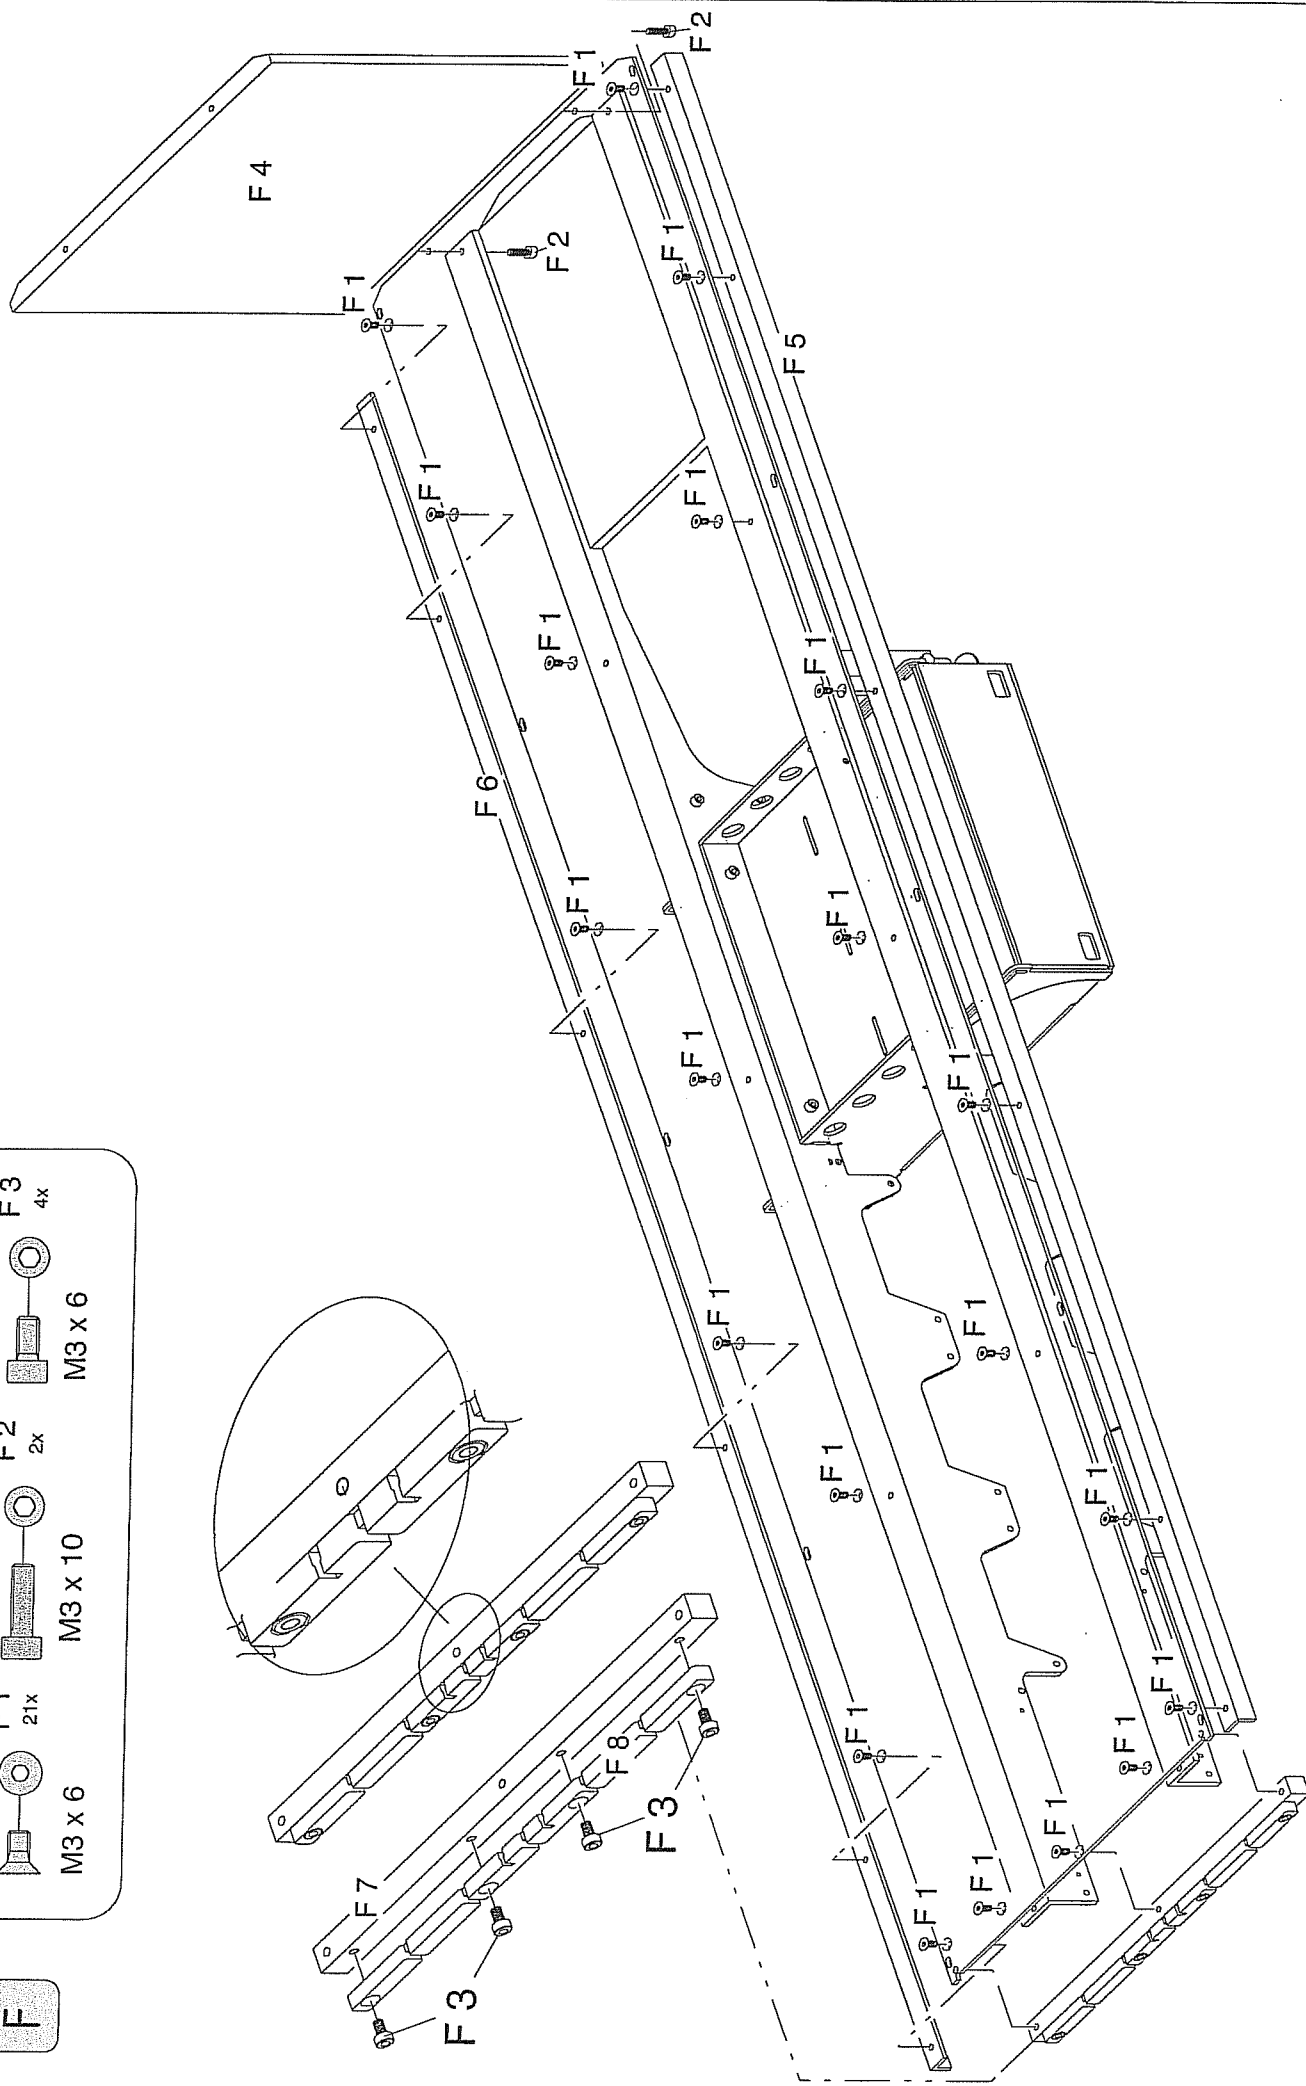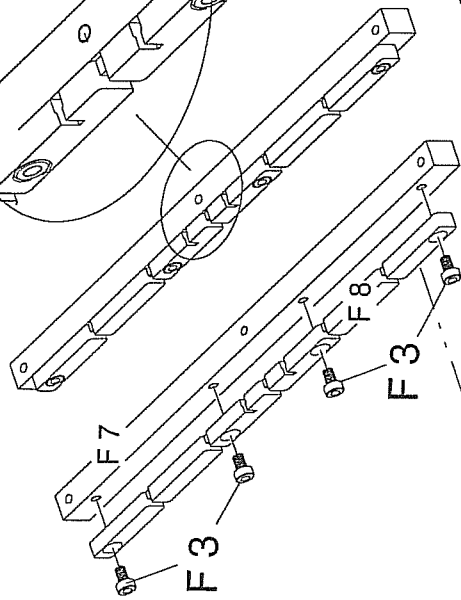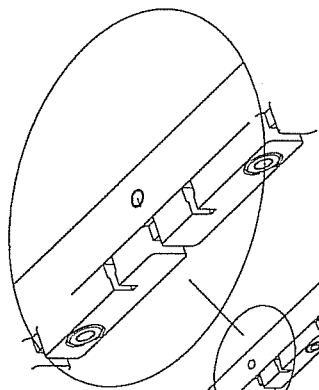

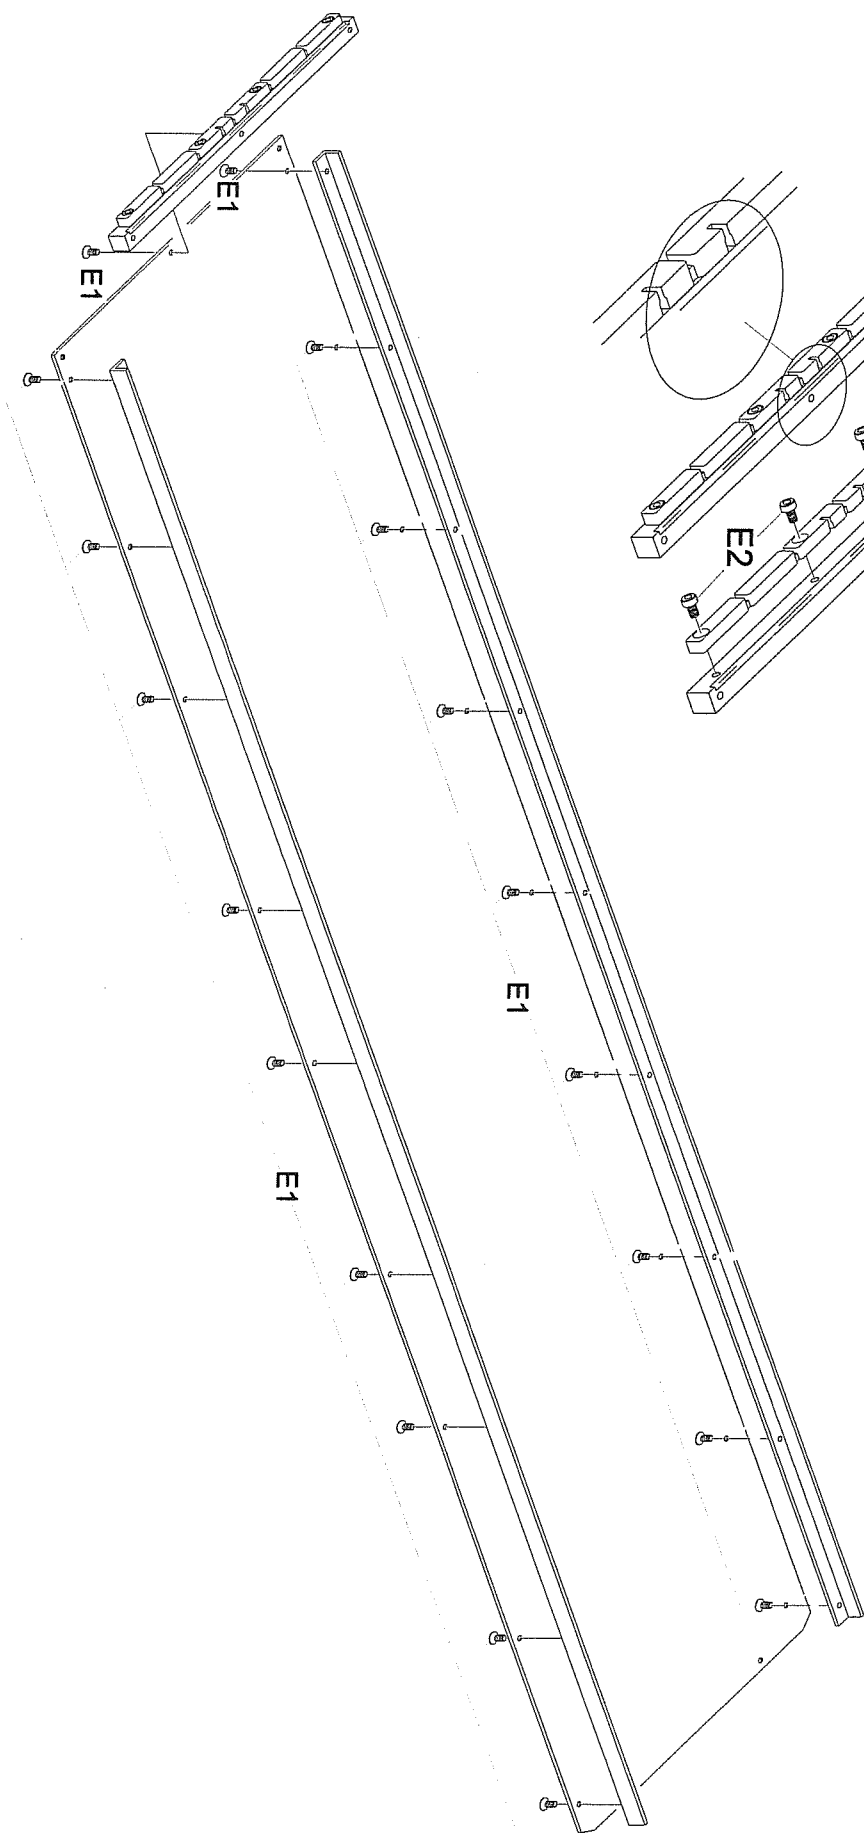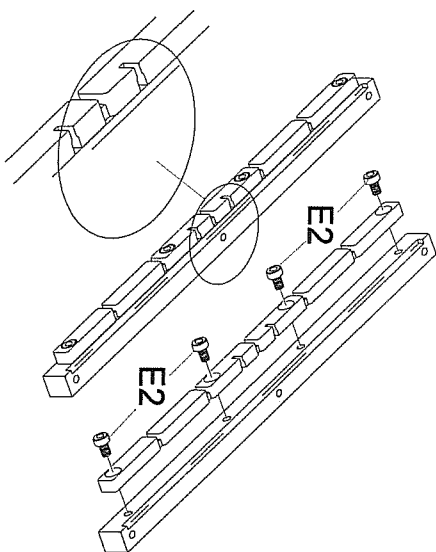

M3 x 6


M3 x 6

H

M3 x 14




F1
2 x




F2
2 x


M3 x 6






F3
2 x



M3 x 16

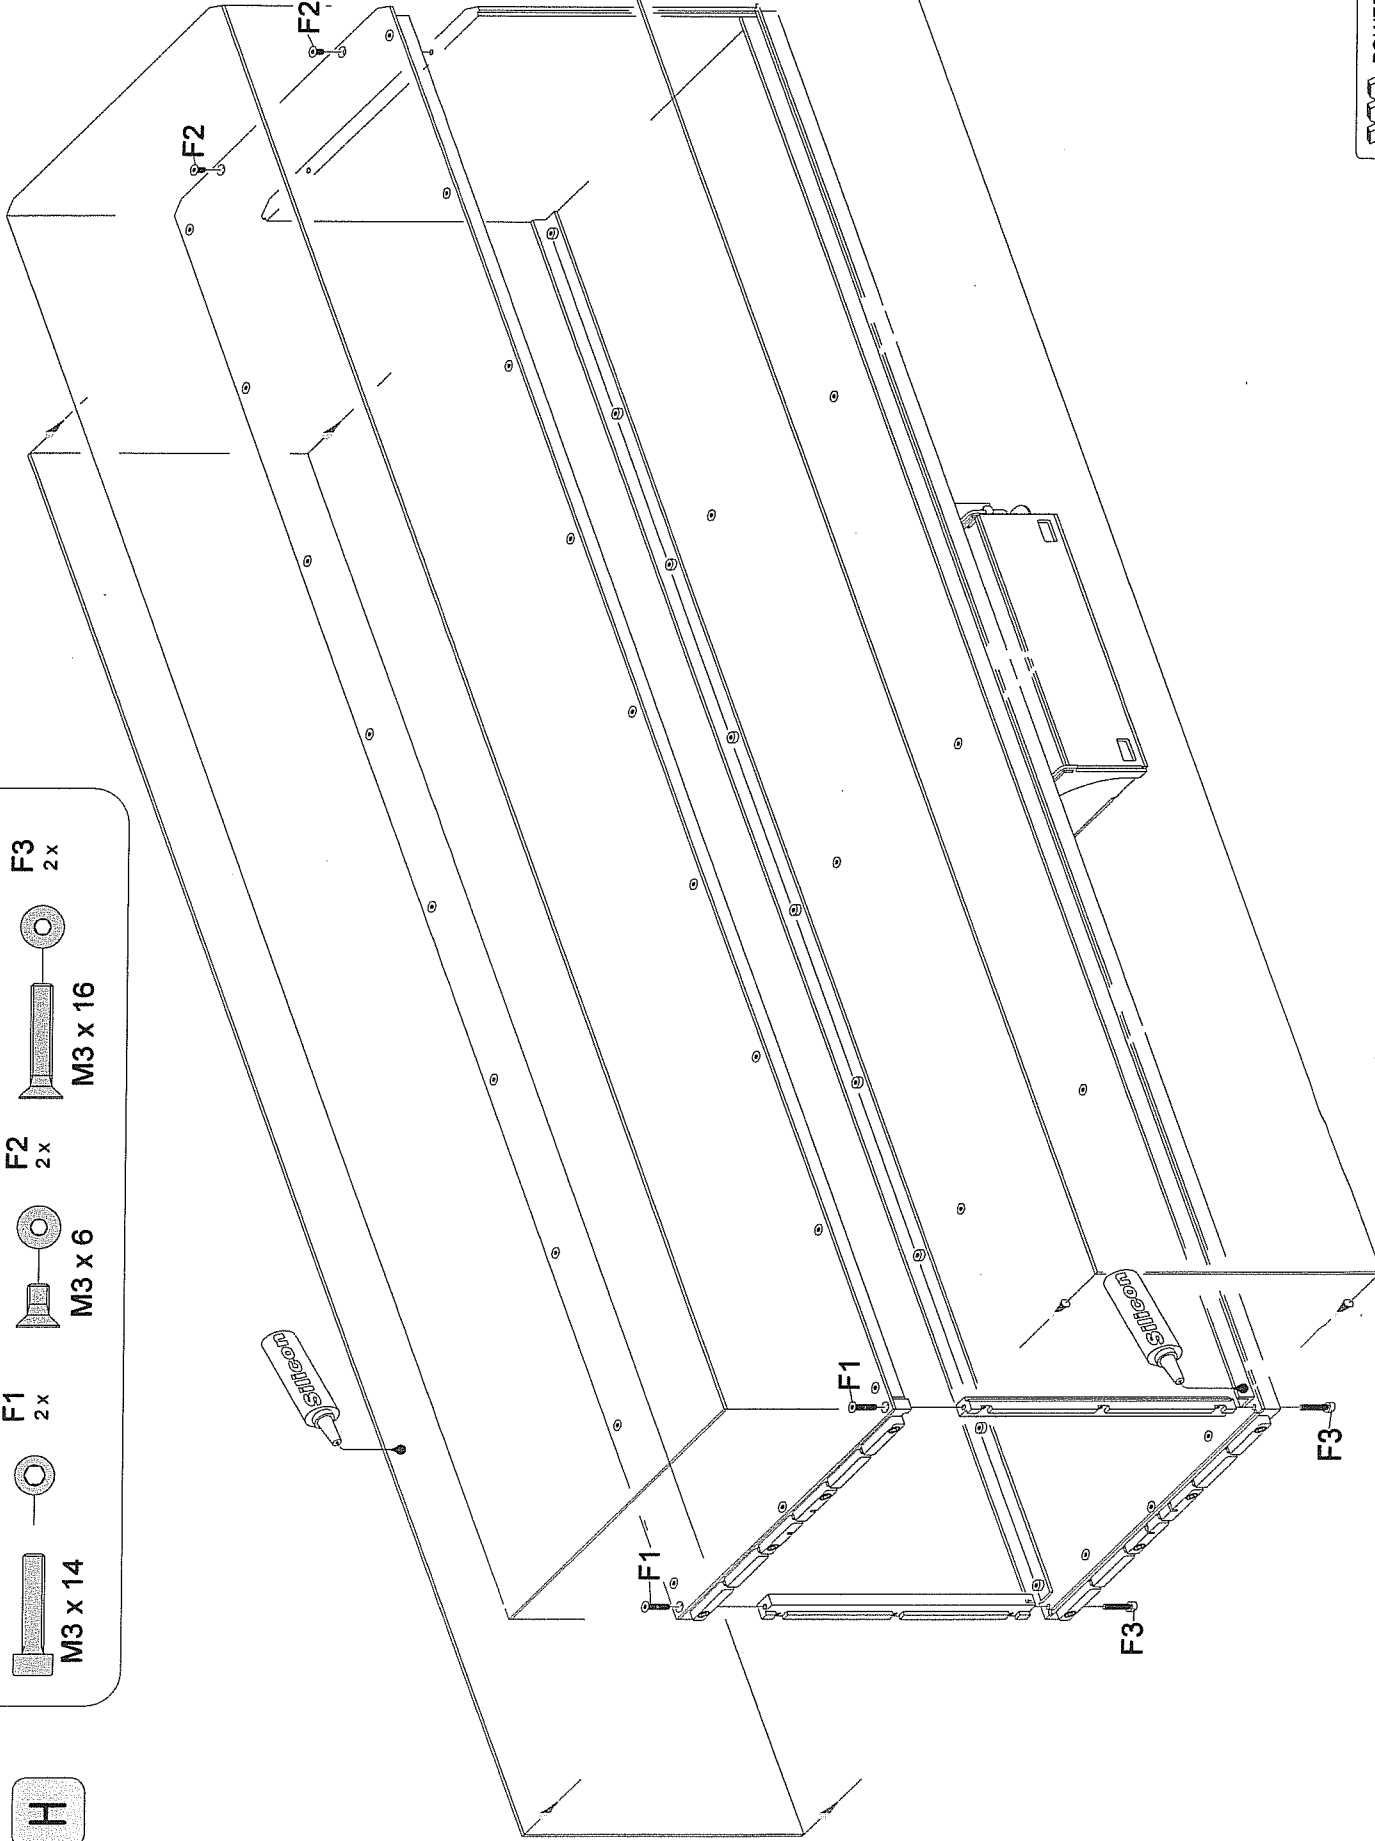

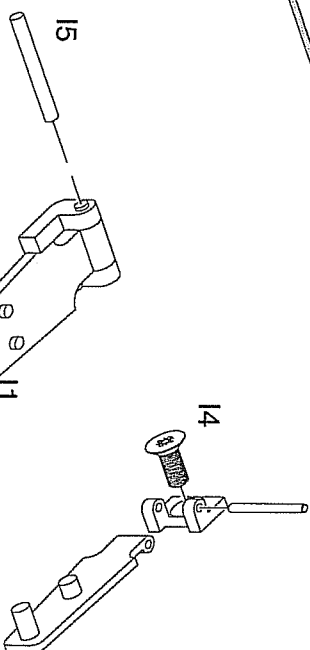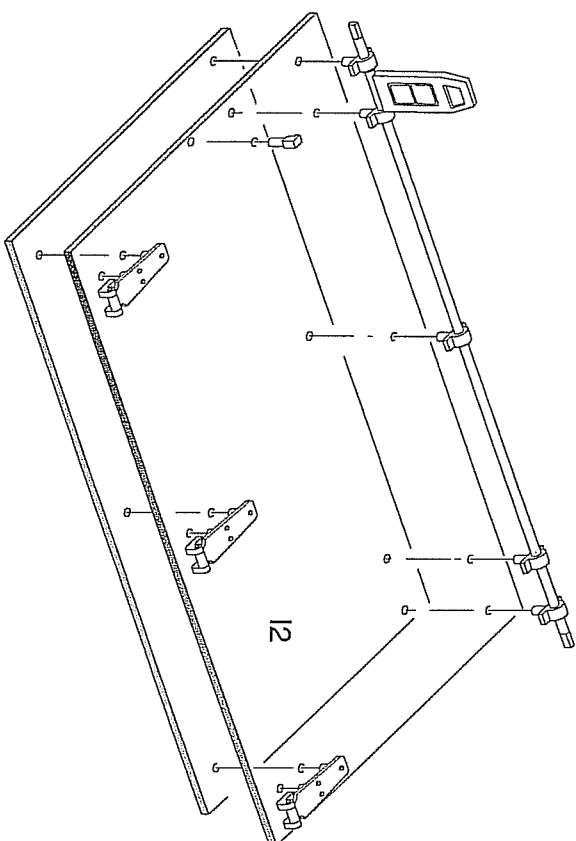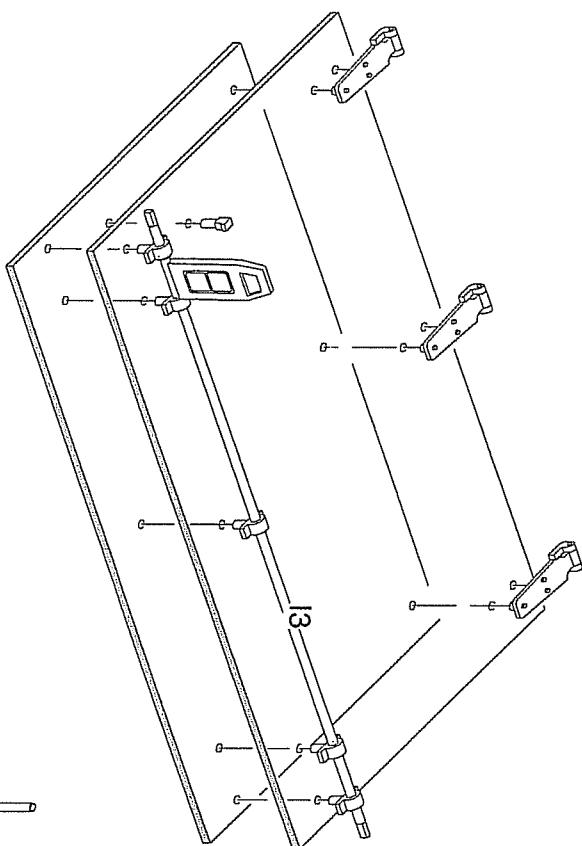


14
6x

M2 x 6

15
6x

1 x 10

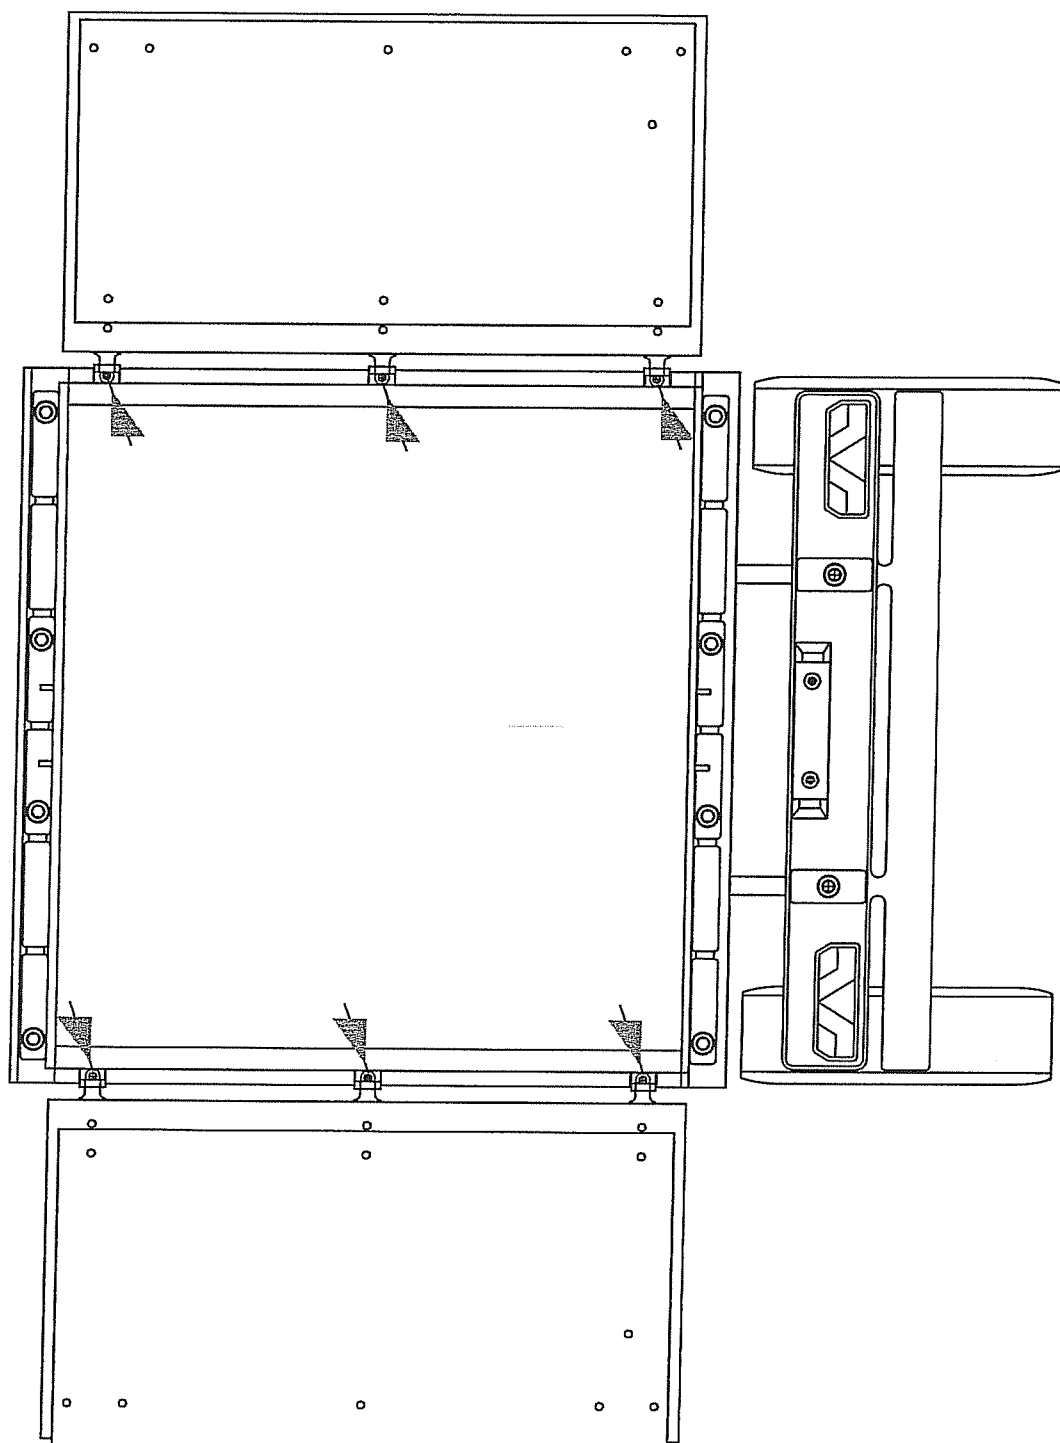



www.carson-modelsport.com

Service-Hotline:

Montag - Donnerstag

8.00 Uhr - 17.00 Uhr

Freitag 8 -14.30


(01805 / 73 33 00) Germany

12 ct/min

Dickie-TAMIYA Modellsport GmbH & Co KG

Mittlere Motschstraße 9

96515 Sonneberg

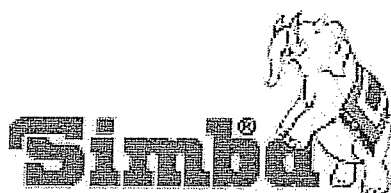

SIMBA · DICKIE · GROUP

Eichhorn noris 



Schuco